


# HYPERION LONG LIFE 20 Indoor

## Lithium Ion Energy Storage Installation Instructions

Art. Nr. 629779

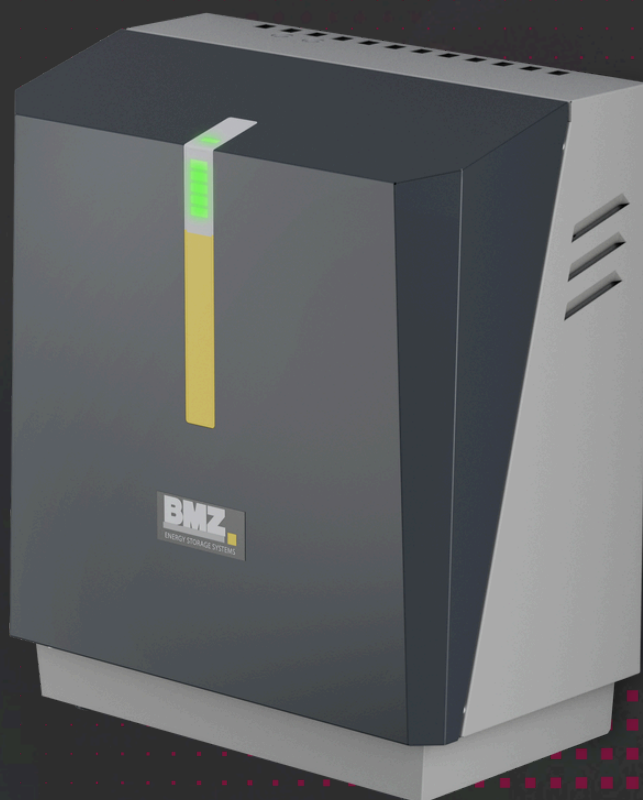

Read carefully before installation.  
Keep for future reference.  
Pass on to the next owner.



E-Mobility



Drive  
System



Energy Storage  
Systems



Power and  
Garden Tools



Industrial



Medical

---

## Addresses, identification, and notes

### Imprint

BMZ Germany GmbH  
Zeche Gustav 1  
63791 Karlstein am Main  
Germany

Tel.: +49 6188 9956-0  
Fax: +49 6188 9956-900  
E-mail: mail@bmz-group.com

### Product identification

Hyperion Long Life BMZ item no. 630210  
Helios Battery Module item no. 628899  
Model: Hyperion Long Life Lithium-Ion Energy Storage  
Country of Origin: Germany  
Symbol: CE

### Customer Service

+49 6188 9956-9830

### Document identification

Original installation instructions Hyperion Long Life Lithium-Ion Energy Storage  
Item number: 630210  
MAN-10115 | Rev: 0-2  
As on: 20-11-2024  
All rights reserved.

## Table of Contents

1	Safety	5
1.1	Important notes on this manual	5
1.1.1	Purpose	5
1.1.2	Target group	5
1.1.3	Storage	5
1.2	Symbol explanations	5
1.2.1	Explanations regarding safety instructions and warnings	5
1.2.2	Explanation of pictograms and symbols	6
1.3	Battery application area	7
1.3.1	Appropriate use	7
1.3.2	Perilous misuse	8
1.4	Main hazards	8
1.5	Qualification of the users	8
1.6	Personal protective equipment (PPE)	9
1.7	Emergency instructions	9
1.7.1	Measures in case of fire	9
1.7.2	Measures after gases or liquids have escaped	9
1.7.3	Measures after electric shock	9
2	Product description	10
2.1	Important information about the product	10
2.1.1	Overall view	10
2.1.2	Conformity	10
2.2	Scope of delivery	11
2.3	Technical data	11
2.3.1	Performance features	11
2.3.2	Dimensions and weight of individual module	12
2.3.3	Compatible inverters	12
2.3.4	Supply, interfaces, connections	12
2.3.5	Ambient conditions	12
2.4	Status and SOC display	13
3	Commissioning	13
3.1	Safety Instructions	13
3.2	Installation	13
3.2.1	Transport	13
3.2.2	Choice of installation site	14
3.2.3	Error signalling devices	14

---



3.2.4	Mounting	15
3.3	Assembly	15
3.3.1	Installing Helios Long Life modular batteries	15
3.3.2	Connect Helios Long Life modular batteries next to each other in series	18
3.3.3	Closing the housing of the battery system	19
3.3.4	Adding battery modules	19
3.3.5	Disposal	20
3.4	Connecting the inverter	20
3.4.1	SMA Sunny Boy Storage 3.7 / 5.0 / 6.0	20
3.4.2	SMA Sunny Tripower 5.0/6.0/8.0/10.0 Smart Energy	21
3.4.3	Kostal PLENTICORE plus / BI	23
3.4.4	GoodWe ET PLUS+ GW5K/GW6.5K/GW8K/GW10K	25
3.4.5	SOFARSOLAR HYD 5/6/8/10/15/20KTL-3PH	26
3.4.6	Solis S6-EH3P 3-10K-H-EU	27
3.5	Putting the Hyperion Long Life storage system into operation	28
4	Repair	28
5	Decommissioning, storage	28
5.1	Safety regulations	28
5.2	Storage conditions	29
5.2.1	Storage period	29
5.2.2	Physical conditions	29
5.2.3	Cleaning	29
6	Packing and transport	29
7	Disposal	30
8	Appendix	31
8.1	BMS master, DC-DC converter and relay in Hyperion Long Life	31
8.2	Assignment BMS master inverter interface (X2)	31
8.3	Adjusting system voltage with SMA SB Storage	33
9	Further directories	34
9.1	Glossary	34
9.2	List of tables	34
9.3	List of figures	34



# 1 Safety

Before installing the battery system, read these instructions carefully.

Please follow the safety and warning instructions carefully to avoid damage to persons, objects and the environment.

 	<div style="background-color: #FFD700; text-align: center; padding: 2px;"><b>⚠ CAUTION</b></div> <p>Risk of burns if you fail to adhere to the safety instructions.</p> <p>During operation, heat can be generated by live parts, overload, arc or short circuit. Touching hot surfaces can cause minor burns.</p> <p>► Read the operating instructions carefully before using the modular battery.</p>
------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## 1.1 Important notes on this manual

### 1.1.1 Purpose

This document describes the installation of a BMZ Hyperion Long Life battery system in combination with the following inverters:

- SMA Sunny Boy Storage 3.7/5.0/6.0
- SMA Sunny Tripower 5.0/6.0/8.0/10.0 Smart Energy
- Kostal PLENTICORE plus/BI
- GoodWe ET PLUS+ GW5K/GW6.5K/GW8K/GW10K
- SOFARSOLAR HYD 5/6/8/10/15/20KTL-3PH
- Solis S6-EH3P (3-10) K-H-EU

### 1.1.2 Target group

The installation instructions are intended exclusively for qualified electricians.

### 1.1.3 Storage

This manual is part of the battery. For a safe installation, the manual must be accessible to the installers.

- ▷ Keep this manual near the battery.
- ▷ Pass this manual on to the next owner of the battery.

## 1.2 Symbol explanations

### 1.2.1 Explanations regarding safety instructions and warnings

Safety instructions are universally valid and can be found in a safety chapter or at the beginning of a chapter.

## Warnings







Warnings are placed directly before the instructions of the respective action. They help you to avoid dangers during the upcoming action. They consist of the following elements:








Table 1: Warnings

Warning triangle	indicates all hazards with regard to death or injury along with a signal word.
Signal word	<div>⚠ <b>DANGER</b></div> denotes a hazard with a high degree of risk. Failure to avoid exposure to it will result in death or serious injury. <div>⚠ <b>WARNING</b></div> denotes a hazard with a medium degree of risk. Failure to avoid exposure to it can result in death or serious injury. <div>⚠ <b>CAUTION</b></div> denotes a hazard with a low degree of risk. Failure to avoid exposure to it can result in a minor injury. <div><b>NOTICE</b></div> indicates hazard concerning objects. Failure to avoid exposure to it can result in damage to property.
Type and source of the danger	states the nature of the danger and what causes it
Consequence	indicates what can happen if you do not follow the warning
Call for action	► describes what you must do to protect yourself from the danger
Additional symbols, pictograms	can be used in addition to the warning triangle. Warning signs (yellow) indicate the danger. Prohibition signs (red) and mandatory signs (blue) represent remedial measures.

## 1.2.2 Explanation of pictograms and symbols

Table 2: Explanation of the symbols used

Symbols	Declaration
	General warning sign. Note additional information.
	Warning of dangerous voltage
	Warning of dangers from batteries that are being charged
	Warning of flammable substances
	Hot surface warning
	Warning of hand injuries

	No access for persons who have pacemakers or implanted defibrillators
	Manual lifting prohibited.
	General commandment sign Note additional information.
	Adhere to instructions.
	Use foot protection.
	Use hand protection.
	Do not dispose of batteries with household garbage.

## 1.3 Battery application area

### 1.3.1 Appropriate use

#### Battery system

The Hyperion Long Life Lithium-Ion Energy Storage is a battery system. It serves as an energy storage device within an electricity storage system for private households and small businesses. It enables you to temporarily store self-produced electricity, e. g. from photovoltaic - or CHP (cogeneration of heat and power) plants. The electricity can later be used when needed.

In a battery system, 3 to 6 Helios modular batteries can be connected to one another in series.

BMZ GmbH is not liable for personal injury and/or material damage due to improper use of the energy storage system.

#### Limits

The battery system is a self-contained unit which is only functional after proper installation with an approved inverter.

A maximum of 6 modular batteries can be connected serially in the Hyperion Long Life battery system.

In order to avoid dangers such as water pipe bursting, the modular batteries must be stored at least 15 cm above the floor. Proper installation of the Hyperion Long Life ensures that the active electrical components are at least 15 cm above the floor.

The Hyperion Long Life battery system may:

- only be used with Helios Long Life modular batteries.
- only be used with compatible inverters.
- only be used in closed rooms.
- only be used in an undamaged condition and in accordance with the operating instructions.

Any other usage is not intended.

### 1.3.2 Perilous misuse

- Do not use the battery system with other modular batteries.
- Do not use the battery system outside its performance limits.
- Do not install the battery system in rooms at risk of flooding.
- Do not connect the battery system to devices not approved for this purpose.
- Do not open modular batteries. The modular battery may only be opened by trained service personnel of BMZ GmbH.

## 1.4 Main hazards

You can expect zero danger from the battery under normal conditions. The battery corresponds to the state of the art in science and technology. However, it is impossible to completely exclude risks if the battery is misused or in the event of technical failure. In case of lithium-ion batteries, these generally include fire, explosion, chemical burns, and electric shock.

The product-specific risk of hazards is elevated by

- water (e. g. flooding),
- heat exposure (> 70 °C), and
- failure or malfunction of the control system due to electromagnetic radiation.



Electric shock

Touching live components may cause an electric shock when modular batteries are connected in series. The electric shock can have thermal or muscle paralyzing effects. The latter can lead to ventricular fibrillation, cardiac arrest or respiratory paralysis, or death.



Fire

Overload, short circuit or arcing can cause a lithium-ion fire with thermal runaway. People can be hit by electrolyte or molten material. In the event of fire, there is a risk of suffocation due to lack of oxygen and a risk of poisoning due to toxic fumes.

## 1.5 Qualification of the users

Only the electricians qualified by BMZ GmbH or BMZ GmbH itself may install the battery system.

Children

Do not leave the children unattended or allow them to be near the battery system.



People with  
implants



High currents have effects on medical implants.

- ▶ People with implants must be careful not to be in the direct vicinity of the battery during operation.

## 1.6 Personal protective equipment (PPE)

Use foot protection and hand protection during assembly.

## 1.7 Emergency instructions

### 1.7.1 Measures in case of fire

- ▶ Do not inhale smoke and vapours.
- ▶ Report a lithium-ion fire to the fire department.
- ▶ If possible: close the doors.
- ▶ If possible: cool the modular battery with water. Avoid contact with the extinguishing water!

### 1.7.2 Measures after gases or liquids have escaped

Inhalation

Escaping gases can cause respiratory problems.

- ▶ Ventilate immediately or go out into the fresh air, in more extreme cases, call a doctor immediately.

Skin contact

Skin contact may cause skin irritation.

- ▶ Wash skin thoroughly with soap and water.

Eye contact

Eye contact may cause irritation to the eyes.

- ▶ Immediately rinse eyes thoroughly with water for 15 minutes, then consult a doctor.

### 1.7.3 Measures after electric shock

Ensure that the system is at zero voltage.


- ▶ For unconscious patients: Ensure respiration and cardiovascular function. If necessary, initiate cardiopulmonary resuscitation immediately.
- ▶ For responsive patients: Cool burn injuries and cover them by dressing the wound.

## 2 Product description

### 2.1 Important information about the product

#### 2.1.1 Overall view

Figure 1: Overall view of battery system

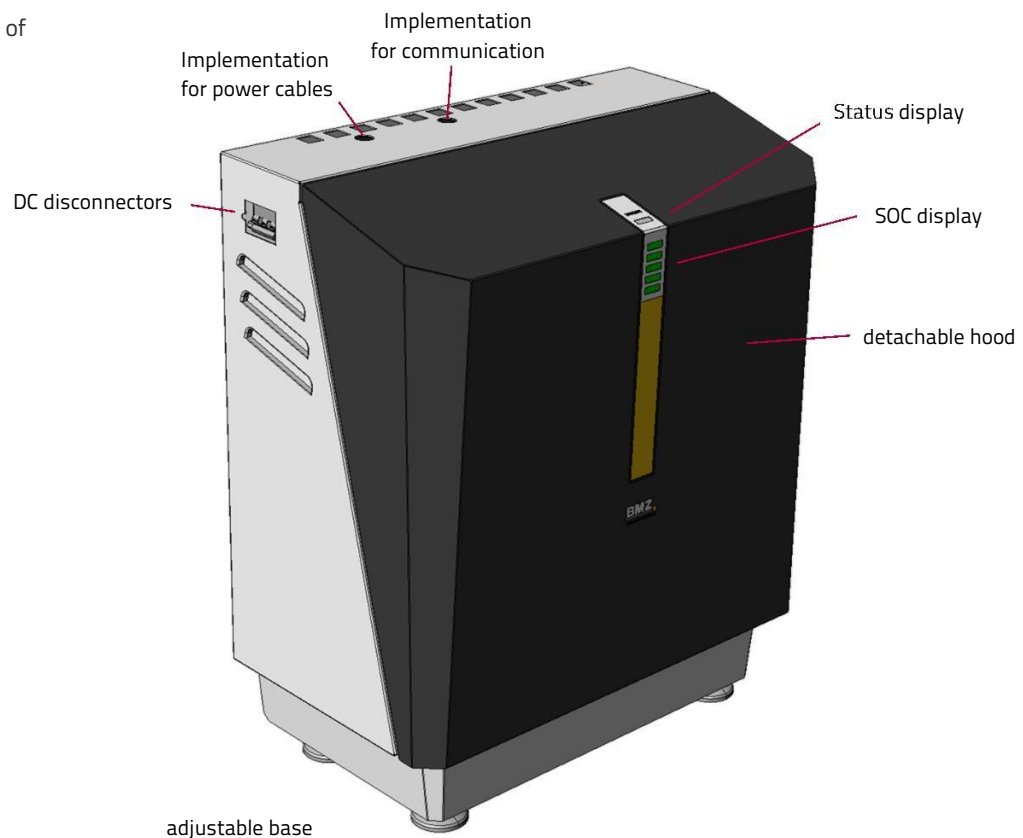

#### 2.1.2 Conformity

The following standards, laws and guidelines were taken into account during the development of the modular battery:

- EU directive with CE labelling obligation
  - Low Voltage Directive 2014/35/EU
  - EMC Directive 2014/30/EU
- Legal requirements
  - UN transport test (lithium systems)
- Standards and user guidelines
  - DIN EN 60730
  - DIN EN 62619
  - VDE AR-E 2510-50

## 2.2 Scope of delivery

- Hyperion Long Life system housing
- Installation kit (in system housing) is included:
  - 7 RJ45 patch cables A
  - 12 screws M5x10 B
  - 3 Dummy sockets, power plugs C
  - 2 PG connections D
    - 1 Three-hole cable bushing E
    - 1 Single-hole cable bushing F
  - 1 Snap Ferrite G
- Installation instructions
- 4 or 6 Helios Long Life modular batteries

Figure 2: Installation kit



## 2.3 Technical data

### 2.3.1 Performance features

Table 3: Technical data

Modules in series	4	6
Energy content (nom./usable)	13.5 kWh / 8.4 kWh	20.1 kWh / 12.6 kWh
Nominal voltage	204 V	307 V
End-of-charge voltage	224 V	336 V
Final discharge voltage	187 V	280 V
Capacity (usable)	41.5 Ah	41.5 Ah
Charging current (max.)	29 A	29 A
Discharge current peak	40 A	40 A
Discharge power peak	8.2 kW	12.3 kW
Discharge power (max.)	6.1 kW	9.2 kW
Weight	129 kg	173 kg
Dimensions (W x H x D)	751 mm x 870 mm x 423 mm	
Discharge operating temperature	-15 to 55 °C	
Load operating temperature	0 to 45 °C	
Storage temperature	-20 to 60 °C	
Battery chemistry	Li-Ion NCA	
Discharge depth	77 % DOD [in relation to nom. capacity]	
Full Cycles	5,000 or 3,000 (for residual capacity of 60 % or 80 %)	

### 2.3.2 Dimensions and weight of individual module

- Dimensions (W x H x D): 546.1 mm x 216.8 mm x 155.25 mm
- Weight: 22 kg

### 2.3.3 Compatible inverters

- SMA Sunny Boy Storage 3.7/5.0/6.0 (CAN)
- SMA Sunny Tripower 5.0/6.0/8.0/10.0 Smart Energy (CAN)
- Kostal PLENTICORE plus/ BI (RS-485)
- GoodWe ET PLUS+ GW5K/GW6.5K/GW8K/GW10K (CAN)
- SOFARSOLAR HYD 5/6/8/10/15/20KTL-3PH (CAN)
- Solis S6-EH3P (3-10) K-H-EU (CAN)

### 2.3.4 Supply, interfaces, connections

#### Battery system

The battery system is supplied with the following connections:

- + DC cable: AWG8 red
- - DC cable: AWG8 black
- Cable for grounding: AWG8 yellow-green
- Communication cable, either CAN or RS-485

All power cables are about 1,5 m long, the communication cable measures 5,4 m. It could be necessary to shorten the cables.

NOTICE: When extending the power cables, do not exceed these lengths:

- 6 mm<sup>2</sup> cross section: 5 m
- 10 mm<sup>2</sup> cross section: 8 m

#### Modular battery

The modular battery has one socket which contains (+) and (-) as power contacts and two RJ45 sockets which contain CAN bus and status and signal lines:

- 1 socket with power contacts (+) and (-)
- 1 RJ45 sockets with CAN bus connection for monitoring and control of the modular battery by the higher-level controller (IN)
- 1 RJ45 socket for connecting a further modular battery (OUT)
- 2 M5 threads for connecting the grounding

### 2.3.5 Ambient conditions

#### Operation

Operation exclusively inside buildings (air-conditioned and non-air-conditioned interiors):

- Temperature: 0 ... 45 °C
- Relative humidity: 5 ... 85 %
- Height: 0 ... 2000 m above sea level









#### Storage

- Temperature storage: -20 ... 60 °C

## 2.4 Status and SOC display

During operation 6 LED fields indicate status and SOC of the battery system.

Table 4: Overview LED status codes

LED	10 seconds ⇄	Status
Green – on		Discharge mode
Green – flashes (0,5 s on / 1 s off)		Ready (battery relay engaged - waiting for charge or discharge)
Green – flashes slowly (1 s on / 5 s off)		Standby (battery system relay open)
Blue – on		Charging mode
Blue – flashes (0,5 s on / 1 s off)		Diagnosis or shutdown of the battery system
Blue – flashes slowly (1 s on / 5 s off)		System start, relay test or software update
Red – flashes quickly (0,2 s on / 0,2 s off)		System error - System has disconnected battery from inverter
Red – flashes (0,5 s on / 1 s off)		Error during start-up of the battery system - battery remains disconnected

## 3 Commissioning

### 3.1 Safety Instructions

#### Guidelines

The installation may only be carried out by qualified electricians according to IEC 60204–1 (International Electrotechnical Commission).

#### Handling, transport

The housing including electronics weighs 41 kg. One modular battery weighs 22 kg. Heavy lifting can cause a disturbance of the musculoskeletal system.

- ▶ Lift the Hyperion Long Life cover (11 kg) and base (30 kg) separately.
- ▶ If necessary, do not lift the Hyperion Long Life base alone or be sure to use transport aids.



Risk of crushing and abrasions when lifting and inserting the modular batteries.

- ▶ Use foot and hand protection.

### 3.2 Installation

#### 3.2.1 Transport

#### Installation site difficult to access

If the installation site is difficult to access, it is recommended that the base and the hood of the system housing be carried to the installation site separately:

1. Open the packaging of the Hyperion Long Life system housing.
2. Unscrew 2 screws (4 mm Allen key) at the front of the bottom of the system housing.
3. Remove the hood from the system housing base.
4. Carry the hood and base to the installation site individually.

#### Modular batteries

The modular batteries should be transported to the installation site in their original packaging.

### 3.2.2 Choice of installation site

The battery system can be mounted upright on the floor or in a hanging position on the wall. It should not be installed in areas, which have a risk of fire and or explosion. The battery system should be installed on non-flammable flooring.

#### Recommendation

It is recommended that the battery system be installed on the floor against a wall, where the inverter can be mounted centrally above it. The inverter should be mounted at least 20 cm above the battery system. At a distance of up to 1,5 m to the connectors, the cables already attached to the Hyperion Long Life can be used.

Leave space of at least 30 cm free to the left and right of the battery system to get to the DC disconnect switch to ensure sufficient air circulation.

#### Securing against tipping over

To prevent the battery system from tipping over, it can be secured to the wall with two screws (not supplied). Two fixing points are provided in the system housing for this purpose.

#### Wall hanging mounting

Four fixing points are provided in the system housing for wall mounting. Since the battery system can weigh up to 173 kg, it must be checked in advance whether the wall and fastening material are suitable to support the load in the long term.

**NOTICE** To access the two upper fastening points, it is recommended to remove the BMS Master before attaching the screws.

### 3.2.3 Error signalling devices

The battery as well as the connected inverters signal battery faults visually (red signal).

Since the battery system is usually operated unattended, a smoke detector, certified according to DIN EN 14604, must be installed in the installation room so that a fire is quickly detected in an emergency.

In addition, a contact on the inverter (depending on the type) can be used to connect optical and/or acoustic signal transmitters which are activated in the event of battery faults (e.g. overtemperature).

**NOTICE** If external optical/acoustic signal transmitters are to be used, it must be clarified in advance whether the inverter has a corresponding signal contact or can be retrofitted with one.

### 3.2.4 Mounting

#### Requirement

The installation location for the battery system and the inverter have been determined.

#### Instructions

Recommended mounting:





1. Install the wall bracket of the inverter.
2. Hook the inverter into its bracket.
3. If necessary, unscrew the cover of the connection area.
4. If not already done, remove the cover from the battery system housing:
  - ⇒ Unscrew 2 screws (4 mm Allen key) on the front bottom.
  - ⇒ Remove the cover from the base.
5. Position the base of the battery housing at the intended installation location (and screw on if necessary).



## 3.3 Assembly

### 3.3.1 Installing Helios Long Life modular batteries

#### Safety Instructions

  	<p style="text-align: center;"><b>⚠ CAUTION</b></p> <p>Risk of crushing due to improper installation.</p> <p>Falling or improper insertion of the module can cause slight bruising and abrasions to hands and feet.</p> <ul style="list-style-type: none"> <li>▶ Wear protective clothing.</li> </ul>
	<p style="text-align: center;"><b>⚠ CAUTION</b></p> <p>Ergonomic hazards due to heavy lifting.</p> <p>Lifting the modular battery can cause a disturbance of the musculoskeletal system.</p> <ul style="list-style-type: none"> <li>▶ Should it be necessary, be sure not to lift the module alone.</li> <li>▶ Use a lifting aid, when necessary.</li> </ul>

## NOTICE

Incorrect installation due to damaged or contaminated modular batteries.  
Only faultless modules may be mounted. The housing must be undamaged.  
The contact points must be undamaged and clean.

- ▶ Perform a visual inspection.
- ▶ Clean the contact points with a dry cloth if necessary.


The modular battery may only be inserted into the Hyperion Long Life battery system provided for this purpose.

### Requirements

- ✓ The power storage system is securely installed.
- ✓ The main switch of the power storage system is off.
- ✓ The modular batteries must have a similar voltage.
- ✓ The inverter is switched off or not connected yet.

### Instructions

1. Make sure that the DC disconnecter of the Hyperion Long Life is set to "off".
2. Loosen the two screws H and I, with which the downholder is fixed on the left and right, -and lift up the downholder.

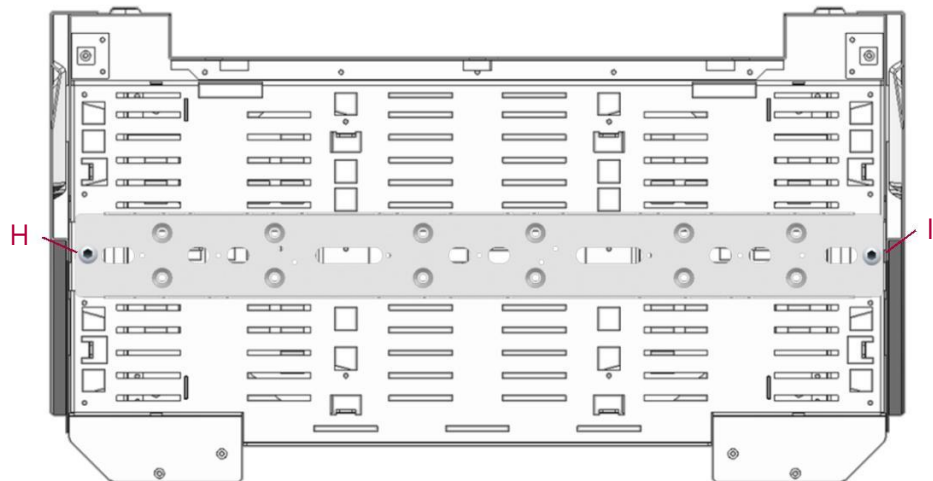

3. Unpack and insert the modular batteries.  
NOTICE: To ensure the best possible cooling; we recommend that the modular batteries are inserted as in Figure 3.

Figure 3: Insert 4 or 6 Helios Long Life modular batteries



4 Helios Long Life battery modules




6 Helios Long Life battery modules



4. Screw the downholder to the right and left of the base of the system housing.
5. Screw each modular battery with two screws (M6) to the downholder/grounding support.

For example, refer to Figure 4.


Figure 4: Modular batteries fixed to the grounding support

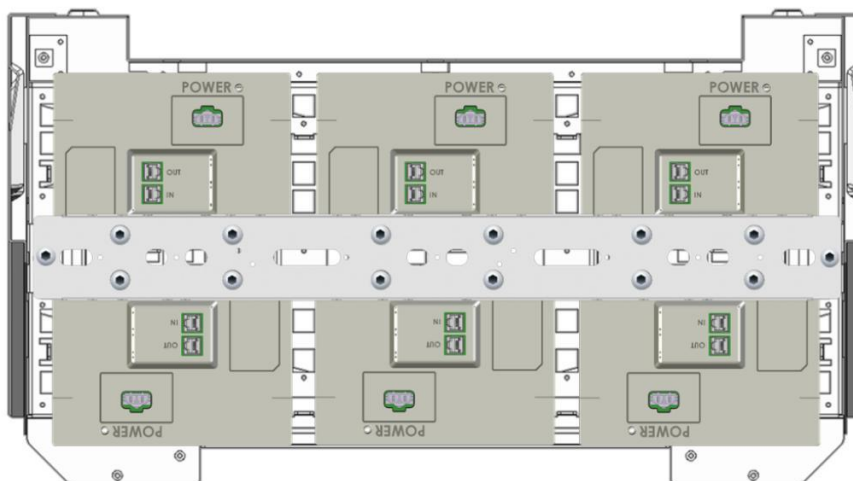

6. Use the patch cables to connect the BMS master (left of the two RJ45 sockets) with the installed modular batteries.


For example, refer to Figure 5.

Figure 5: Connecting the modules to the BMS master with patch cables

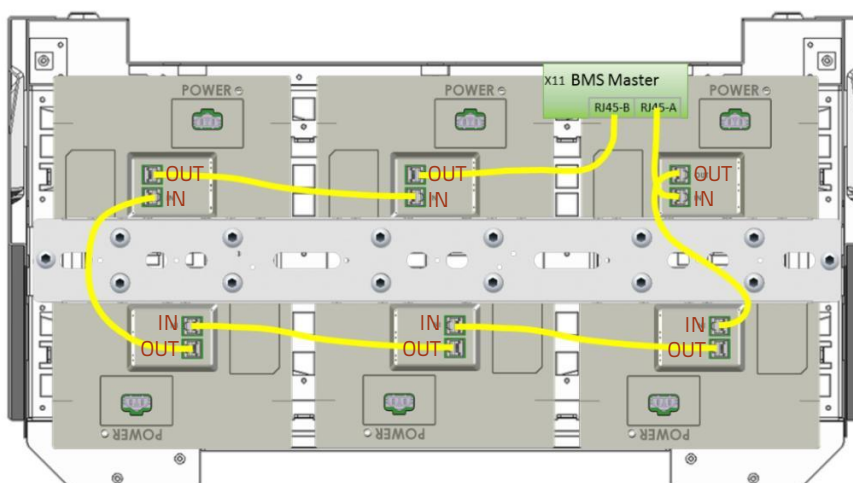


7. Connect the last module with the master's left RJ45 socket (RJ45-B).

### 3.3.2 Connect Helios Long Life battery modules next to each other in series


	<b>⚠ WARNING</b>
	<p>Electric shock from live parts.</p> <p>Touching live components may cause electrical shock, which may create intense heat or paralyse muscles. The latter can lead to ventricular fibrillation, cardiac arrest or respiratory paralysis, or death.</p> <p style="text-align: right;">▶ Never touch the contacts.</p>

1. Remove the safety cover of the "Power" sockets.
2. Insert the power plug for the respective modular battery until it clicks into place. For example, refer to Figure 6.

Figure 6: Power path with switching devices and BMS

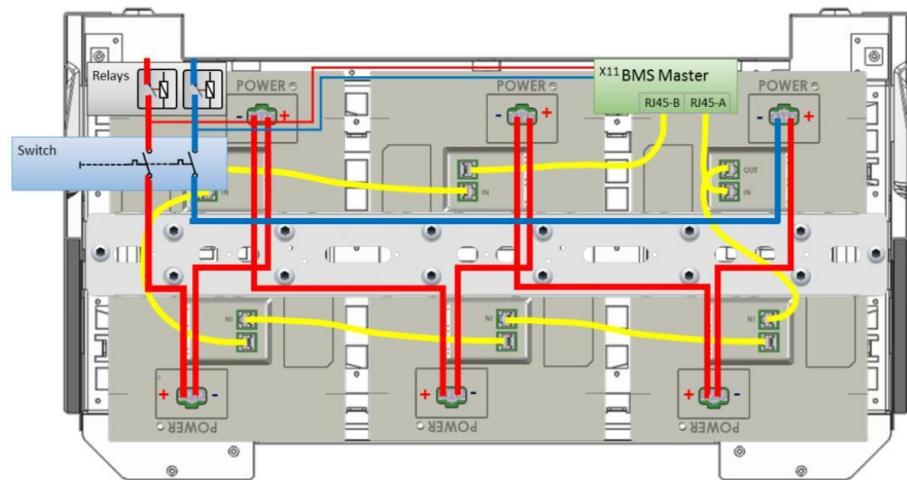

3. Check by pulling the power plugs to make sure that the latching is engaged.
4. If there are less than 6 modular batteries: fit the power plugs not required with the dummy sockets C supplied.
5. Feed the power cables (red and black) as well as PE (yellow-green) through the left hole in the basic housing and fix them with the supplied PG screw connection.

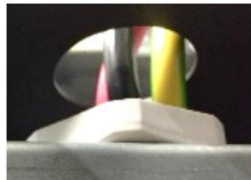


NOTE First lead the cables through the union nut of the PG gland and then through the outer housing.

6. Above the left PG gland, lead the red (+) and black (-) cable through the supplied folding ferrite G.
7. Lead the communication cable through the right hole and fix it with the supplied cable gland.
8. Check that the power cables are firmly attached to the relay. If not, tighten the M4 nuts with 1.5 Nm.




### 3.3.3 Closing the housing of the battery system

1. Position the housing hood (with display) in front of the housing base and plug the cable for the display on the board into the hood.
2. Insert the hood into the guide at the top and close it at the bottom with the two M5x10 screws (4 mm Allen key) which were unscrewed in 3.2.4.

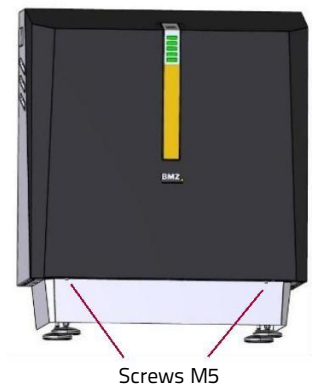

### 3.3.4 Adding battery modules

1. Check the voltage of the new modules. The voltage should be between 47 V and 56 V.
2. Adjust the voltage of the battery system to  $\pm 1$  V to the voltage of the new modules (see Appendix 8.3). An exactly adjusted module voltage avoids adjustment in the system and allows immediate access to the full capacity.
3. Disconnect the inverter from voltage and switch off the Hyperion Long Life.
4. Install the new modules. See chapter 3.3 Assembly.
5. Put the system into operation. See chapter 3.4.

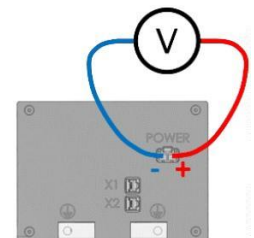

### 3.3.5 Disposal

Dispose of transport packaging for recycling in accordance with the statutory provisions.

It is recommended to keep not required parts (patch cables, dummy plugs, screws) together with the installation instructions near the battery system.


Before removing defective modular batteries, the power socket must be taped with insulating tape after removing the power plug.

## 3.4 Connecting the inverter

### 3.4.1 SMA Sunny Boy Storage 3.7 / 5.0 / 6.0

#### Instructions

Figure 7: Connecting the SMA SB Storage to the Hyperion Long Life

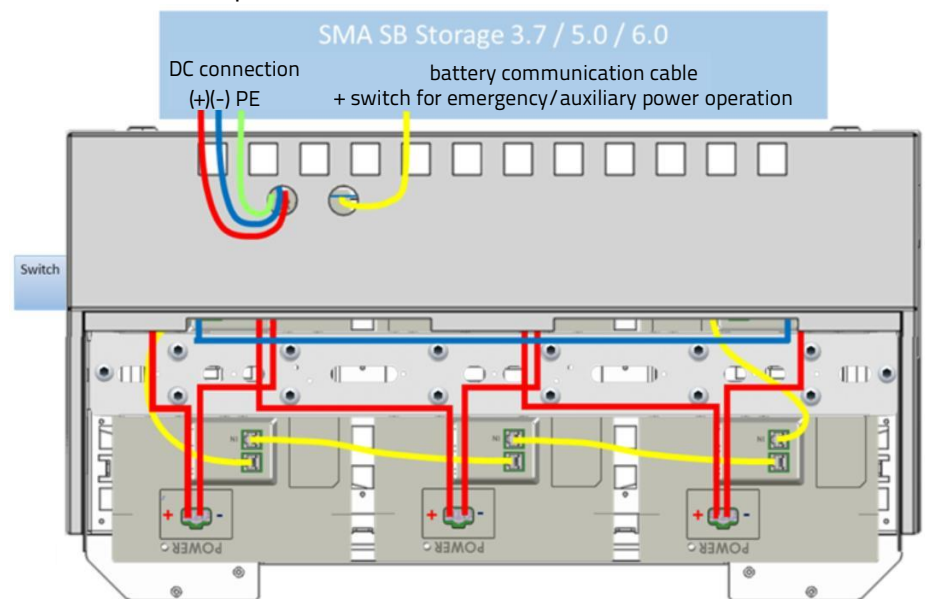

2. Connect the cables in the inverter according to the Sunny Boy Storage 3.7 / 5.0 / 6.0 operating instructions.

⇒ Chapter 6.5: Connecting battery communication cable:

- yellow: CAN H (E)
- white: CAN L (D)
- orange: Enable (B)
- blue: GND (C)




⇒ Chapter 6.1.2: Interior View + Chapter 6.8.3: Connect power cables

- Yellow-green grounding point for grounding the battery (L)

⇒ Chapter 6.8 DC connection

- Red (+) (A+)
- Black (-) (A-)

It is recommended to use all bridges (30 A)

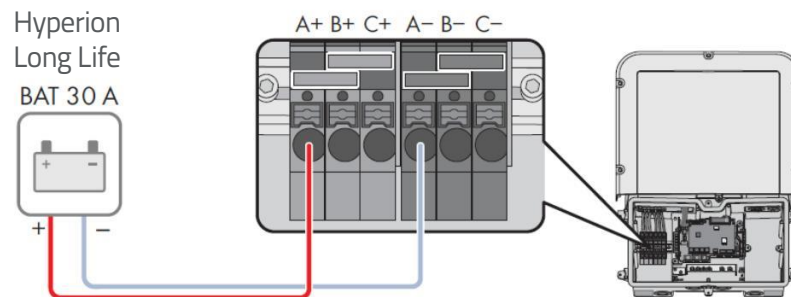

3. Check all electrical connections
4. Close the housing of the inverter.

NOTICE on operation with SMA Sunny Boy Storage 3.7 / 5.0 / 6.0:  
For full functionality, firmware 3.11.16 or newer must be installed on the inverter.

### 3.4.2 SMA Sunny Tripower 5.0/6.0/8.0/10.0 Smart Energy

#### Instructions


1. Ground Hyperion Long Life housing.

⇒ PE

- Yellow-green:

Connect according to normative specifications.

Figure 8: Connection of  
SMA STP SE to BMZ  
Hyperion Long Life

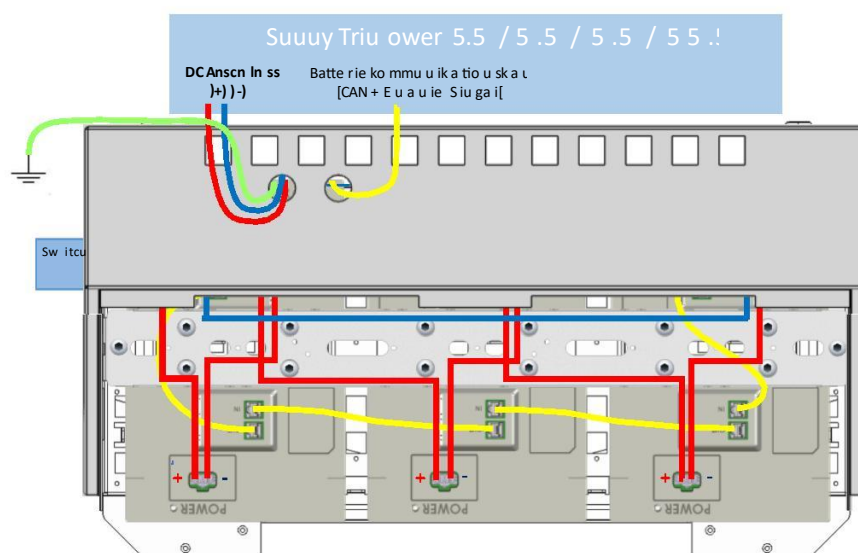



### 2. Connect DC:

⇒ Attach and plug in multi-contact MC4 connector:

- red (+) BAT+
- black (-) BAT-

### 3. Insert battery communication cables in COM connector:

- yellow: CAN H (H)
- white: CAN L (L)
- orange: Enable (Enable Signal)
- blue: GND (Enable Ground)

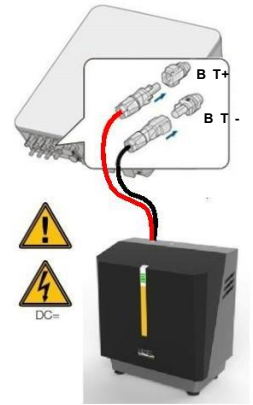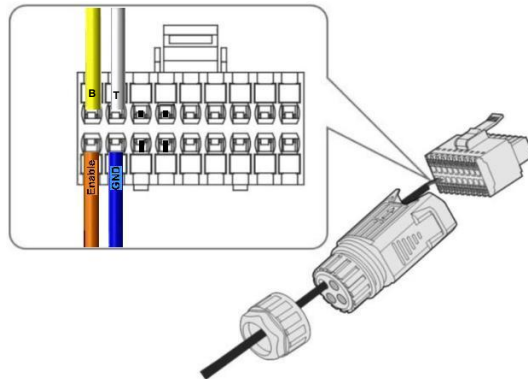

### 4. Assemble COM connectors and plug them into the bottom of the inverter.


### 5. Check all electrical connections.

## 3.4.3 Kostal PLENTICORE plus / BI

## Instructions

1. In order to operate the Hyperion Long Long Life storage system communicatively with the Kostal PLENTICORE plus, the communication must be switched to RS485.


- ⇒ Disconnect the X2 plug from the BMS master (green plug at top left).
- ⇒ Pin the yellow wire from PIN1 to PIN3 (RS485+).
- ⇒ Pin the white wire from PIN2 to PIN4 (RS485-).
- ⇒ Bridge PIN5 and PIN7 to activate the RS485 communication.
- ⇒ Plug X2 back into BMS master.

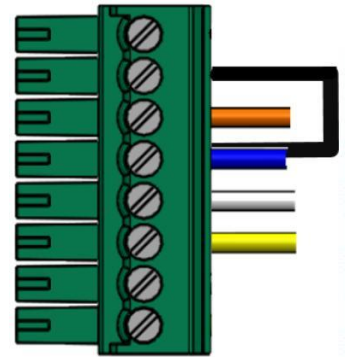

2. Preparation: Ground the Hyperion Long Life housing:

- ⇒ PE
  - Yellow-green Connect to grounding rail

Figure 9: Connecting the PLENTICORE plus / BI to the BMZ Hyperion Long Life

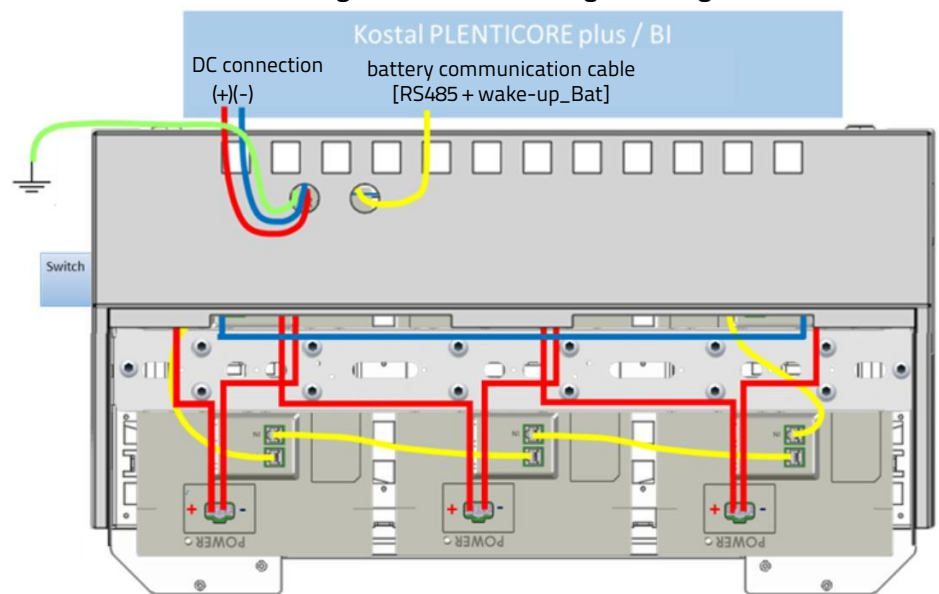


3. Feed the communication cable through the respective PG screw connections into the connection compartment of the inverter.
4. Connect the cables in/on the inverter according to the PLENTICORE plus operating instructions.



⇒ Connecting battery communication cable:

- white: RS485B
- yellow: RS485A
- blue: GND 0V
- orange: VDD +12-14V

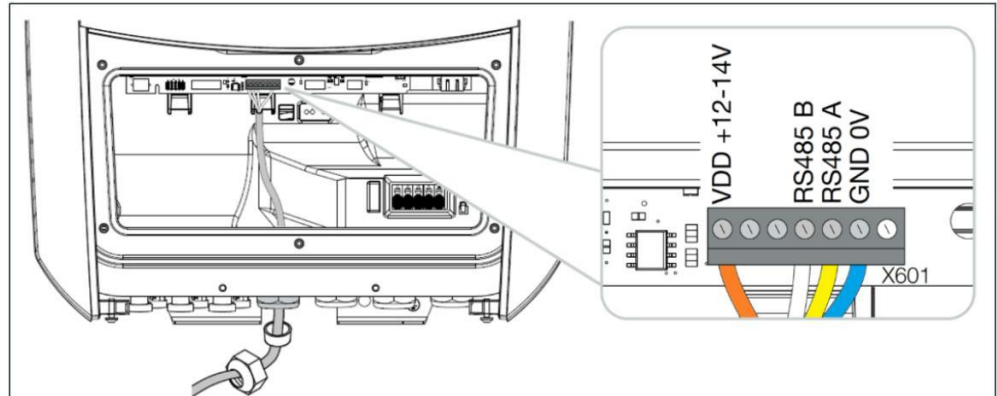


5. Shut the inverter down

6. Establish DC connection:

⇒ Attach Sunclix plug accordingly

- Red (+) (DC3 +)
- Black (-) (DC3 -)

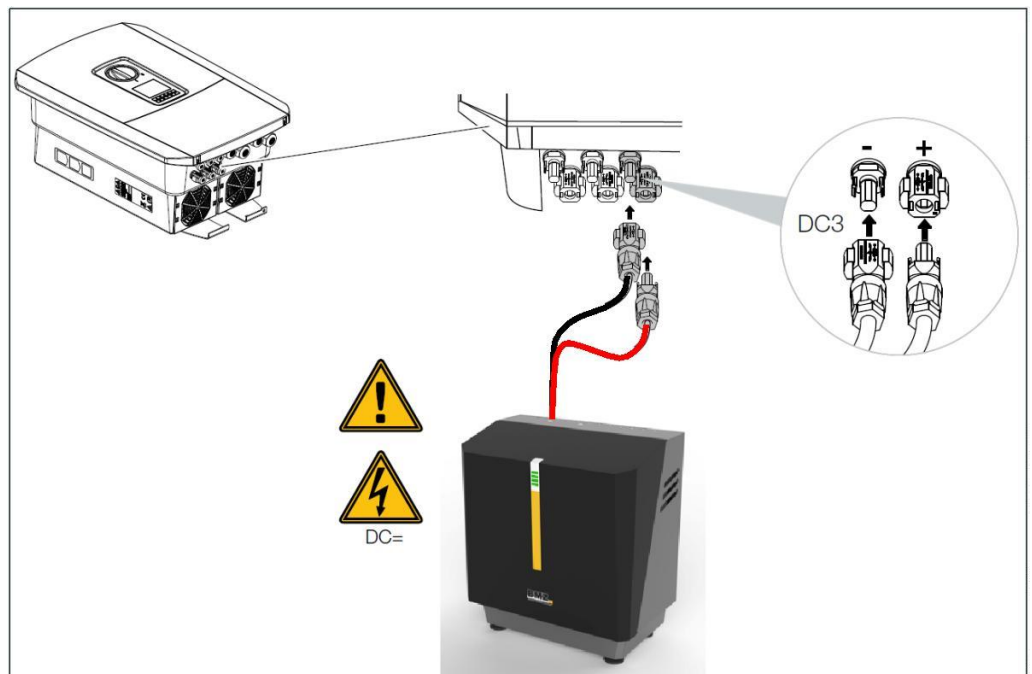

7. Check all electrical connections.




## 3.4.4 GoodWe ET PLUS+ GW5K/GW6.5K/GW8K/GW10K


## Instructions

1. Preparation: Ground the Hyperion Long Life housing.
  - ⇒ PE
    - yellow-green: Lay out according to normative specifications

Figure 10: Connection of GoodWe ET PLUS+ to BMZ Hyperion Long Life

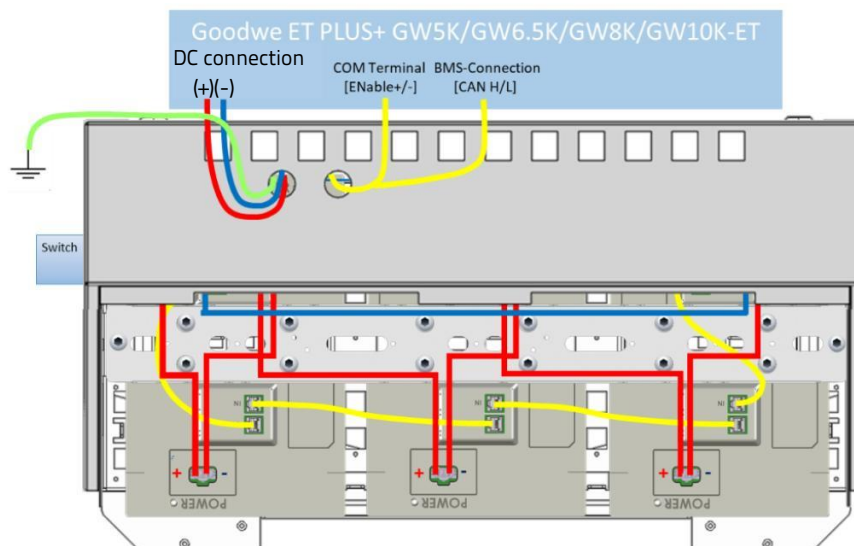


2. Connect DC
  - ⇒ Attach the BAT connector accordingly and plug in:
    - red (+) BAT+
    - black (-) BAT-
  - ⇒ NOTICE: If necessary, adapt the conductor to 6 mm<sup>2</sup>.

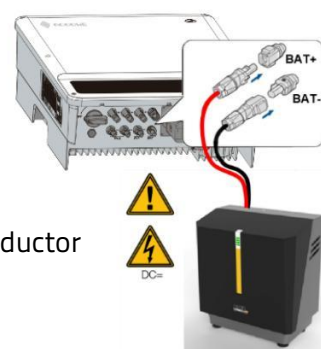


3. Insert the ET PLUS+ BMS battery communication cable into the Hyperion Long Life housing and connect it to the BMS master connector X2:

- blue Pin 1 CAN H
- blue-white Pin 2 CAN L

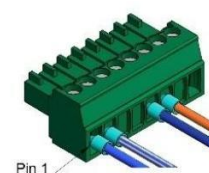

4. Insert the Hyperion Long Life communication cable into the ET PLUS+ COM terminal and connect the enable signals:

- orange Pin 11 Enable (LG\_EN+)
- blue Pin 12 GND (LG\_EN-)

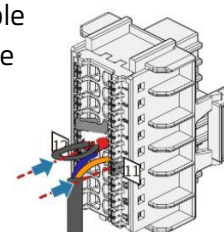

5. When all connection work is complete, assemble the COM terminal and plug it into the bottom of the inverter.
6. Check all electrical connections.


## NOTICE

During commissioning, select battery model "Default" in the setup of the PV Master App.

## 3.4.5 SOFARSOLAR HYD 5/6/8/10/15/20KTL-3PH

## Instructions

Figure 11: Connection of SOFARSOLAR HYD 5...20KTL to BMZ Hyperion Long Life

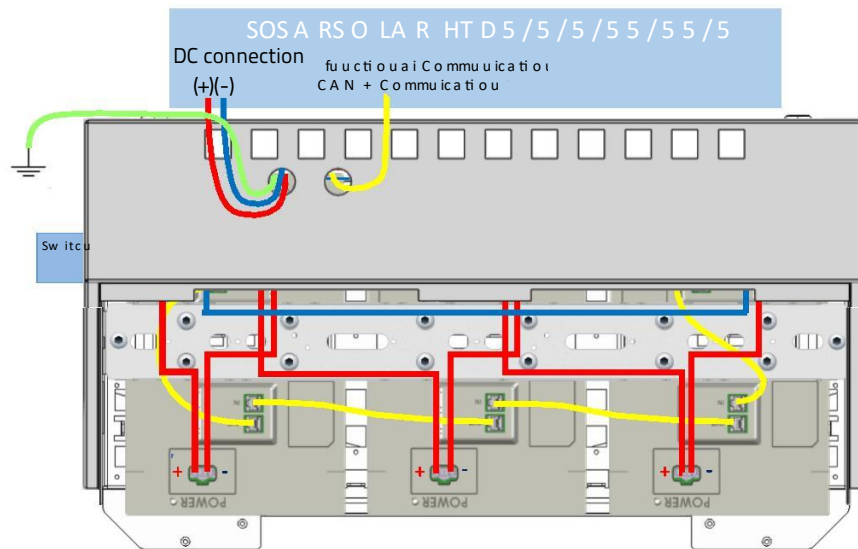


## 2. Connect DC

⇒ Attach the BAT connector accordingly and plug in:


- red (+) BAT+
- black (-) BAT-

NOTICE: If necessary, adapt the conductor to 6 mm<sup>2</sup>.

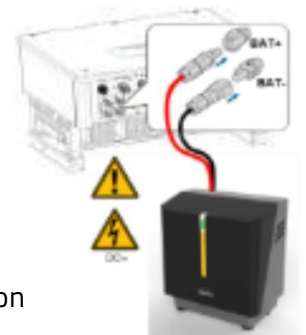

## 3. Connect the Hyperion Long Life communication cable at the inverter Multifunctional Communication Port as follows:

- Yellow CAN H (7)
- White CAN L (8)
- Orange Enable (16)
- Blue GND (12)

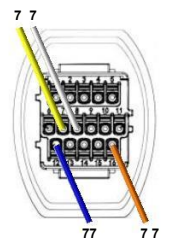

## 4. When all connection work is complete, assemble the housing of the Multifunctional Communication Port and plug it into the bottom of the inverter.

## 5. Check all electrical connections.

## NOTICE

When commissioning, 'GENERAL' must be selected under battery type.

The inverters with two battery inputs allow the operation of two Hyperion Long Life. The precondition for this is that the two connected Hyperion Long Life have different CAN addresses. Using the BMZ ESS-HV flash tool (at least version 1.0.16) the trained installer can change the CAN address of one of the two Hyperion Long Life from default 0 to 1.

## 3.4.6 Solis S6-EH3P 3-10K-H-EU


## Instructions

## 1. Preparation: Ground the Hyperion Long Life housing.

⇒ PE

- yellow-green: Lay out according to normative specifications

Figure 12:  
Connection of Solis  
S6-EH3P 3-10K-H-EU  
to the Hyperion Long Life

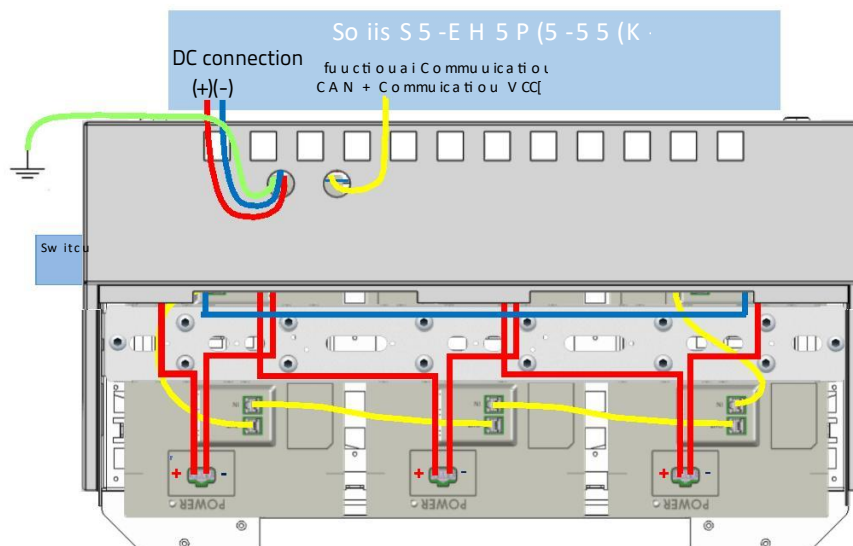


## 2. Connect DC


⇒ Attach the BAT connector accordingly plug in:

- red (+) BAT+
- black (-) BAT-

NOTICE: If necessary, adapt the conductor to 6 mm<sup>2</sup>.

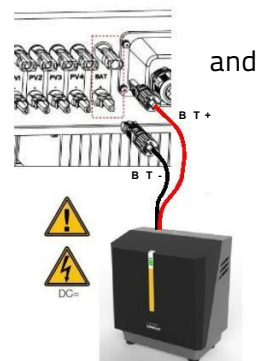


## 3. After steps 1 to 4 of the Solis S6 user manual chapter 4.7.1, the CAN connection of the Hyperion Long Life communication cable is crimped onto the RJ45

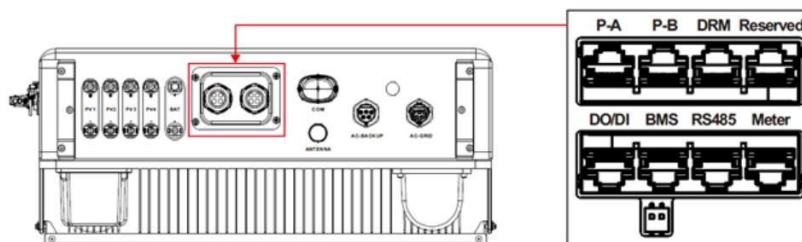

connector for the Socket marked BMS as follows:

- Yellow Pin 4 CAN H (blue)
- White Pin 5 CAN L (blue-white)

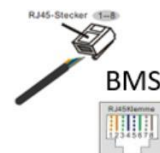

## 4. From the Hyperion Long Life communication cable the Enable-Signal strands crimped onto the RJ45 connector for the DRM socket:

- Orange Pin 7 Enable (brown-white)
- Blue Pin 8 GND (brown)



5. After completing all communication connection work according to steps 6 and 7 in chapter 4.7.1 of the Solis S6 user manual, mount the protective cover.
6. Check all electrical connections.

**NOTICE**

During commissioning with the Soliscloud APP, according to Chapter 5 of the Solis S6 user manual, select the battery model "BMZ".

### 3.5 Putting the Hyperion Long Life storage system into operation

**Instructions**

1. Commission the inverter.
2. Set up the inverter communication so that the battery system can be set up.
3. Switch the DC disconnecter on the left side of the Hyperion Long Life to "on".
4. Commission the storage system according to the operating manual of the connected inverter.

## 4 Repair

The modular battery may only be opened and repaired by the manufacturer.

Defective modules will be sent to the manufacturer's service department.

## 5 Decommissioning, storage

### 5.1 Safety regulations

#### WARNING

Health hazard due to deep-discharging.

After more than six months of storage, the battery cells can be deeply discharged. This can lead to chemical reactions within the cells, which result in the development of heat and gas, as well as possible health hazards.

- Recharge the module every six months.

- Switch off the DC switch on the left side of the Hyperion Long Life battery system.
- Open the Hyperion Long Life.
- Unlock and disconnect both the patch cables and the power cables on the Helios Long Life modular batteries.
- Mask the power socket with insulating tape.

- All current legal fire protection requirements must be met. In case of doubt, contact your local fire brigade and your insurance agency.
- Store the modular battery in a dry place, protected from sunlight.
- If the modular battery has been in water or any other liquid, it must not be put back into operation.

## 5.2 Storage conditions

### 5.2.1 Storage period

Do not store the module for more than six months from the date of manufacture (see type label). The module must be recharged for longer storage periods.

### 5.2.2 Physical conditions

Store the module in a dry place, protected from direct sunlight, maximum 3000 m above sea level.

The following conditions should prevail on an average:

- |                      |               |
|----------------------|---------------|
| ■ Temperature:       | 15 ... 25 °C  |
| Tough limits:        |               |
| Storage:             | -10 ... 50 °C |
| Transport:           | -20 ... 60 °C |
| ■ Relative humidity: | 0 ... 50 %    |

No more than 4 modular batteries may be stacked on top of each other.

Store modular batteries at least 15 cm above the floor to reduce the risk of water damage.

### 5.2.3 Cleaning

Before storage, remove dust and other deposits from the battery system. Either by vacuuming and/or with a damp cloth.

## 6 Packing and transport

The modular battery may only be shipped in suitable packaging that is labelled in accordance with legal requirements and accompanied by the accompanying documents.

If still available and intact, the delivery packaging can be used.

If not, the manufacturer's service department can help you along.


## 7 Disposal

Legal requirements	Batteries may not be disposed of in household garbage. As a consumer, you are legally obligated to return used batteries. The return is free of charge.
Safety	If lithium batteries are not disposed of properly, fire or leakage of hazardous substances may cause damage to health and the environment.
Return	Please contact the manufacturer when the modular battery has reached the end of its service life.
Environment	The manufacturer shall send used batteries for recycling in accordance with their electrochemical system. Valuable raw materials are recycled and hazardous substances are disposed of properly. Returning these materials makes a valuable contribution to protecting our environment.

## 8 Appendix

### 8.1 BMS master, DC-DC converter and relay in Hyperion Long Life


Figure 13: Position of BMS master and DC-DC converter

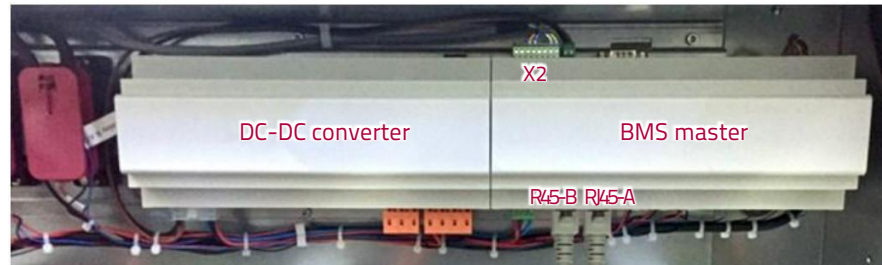

### 8.2 Assignment BMS master inverter interface (X2)

Table 5: Pin assignment of X2 for SMA SB Storage, Sungrow SH RT and GoodWe ET PLUS+



HyperionLong Life		SMA Sunny Boy Storage 3.7/5.0/6.0		SMA Sunny Tripower 5.0/6.0/8.0/10.0 SE		GoodWe ET PLUS+ GW5K/GW6.5K/GW8K/GW10K	
Pin	Assignment	Pin	Colour [BATx]	Pin	Colour [COM]	Pin	Colour [Port]
1	CAN H	E	yellow	1	yellow	4	[BMS] blue
2	CAN L	D	white	3	white	5	[BMS] blue/white
3	RS485A	n.c.	n.c.	n.c.	n.c.	n.c.	n.c.
4	RS485B	n.c.	n.c.	n.c.	n.c.	n.c.	n.c.
5	GND	C	blue	4	blue	12	[COM-T.] LG_EN-
6	Enable (12 V, 1 mA)	B	orange	2	orange	11	[COM-T.] LG_EN+
7	Jumper RS485	n.c.	n.c.	n.c.	n.c.	n.c.	n.c.
8	./.	n.c.	n.c.	n.c.	n.c.	n.c.	n.c.

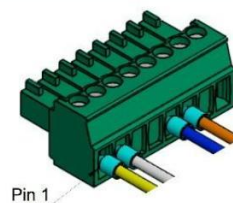

Pin 1

delivery state

Table 6: Pin assignment of X2 for SOFARSOLAR HYD Serie, Solis and Kostal PLENTICORE plus/BI

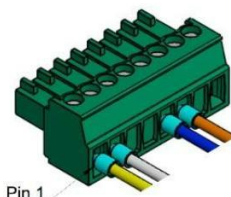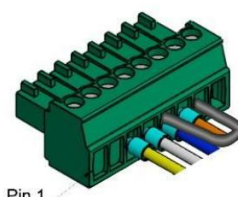HyperionLong Life		SOFARSOLAR HYD 5/6/8/10/ 15/20 KTL 3PH		Solis S6-EH3P 3/4/5/8/10K-H-EU		Kostal PLENTICORE plus / PLENTICORE BI	
Pin	Assignment	Pin	Strand colour	Pin	Strand colour	Pin	Strand colour [X601]
1	CAN H	7	yellow	4	yellow	n.c.	n.c.
2	CAN L	8	white	5	white	n.c.	n.c.
3	RS485A	n.c.	n.c.	n.c.	n.c.	5	yellow
4	RS485B	n.c.	n.c.	n.c.	n.c.	4	white
5	GND	12	blue	8	blue	6	blue
6	Enable	16	orange	7	orange	1	orange
7	Jumper RS485	n.c.	n.c.	n.c.	n.c.	n.c.	n.c.
8	./.	n.c.	n.c.	n.c.	n.c.	n.c.	n.c.
		 Pin 1 delivery state				 Pin 1 Bridge between pin 5 and 7 defines RS485 and protocol for operation with Kostal PLENTICORE plus / BI	



### 8.3 Adjusting system voltage with SMA SB Storage

To add Helios Long Life battery modules, the system voltage must be adjusted to the module voltage. For this purpose, set the Sunny Boy Storage to a specific SOC:

1. Open the Sunny Boy Storage user interface.
2. Register as installer.
3. Select Device Parameters and click on Edit Parameters.
4. Enter the required SOC at Battery - External Default and confirm at the top of the Web UI with Save All.

Example:

- ⇒ The new battery module has 50.4 V – equals approx. 30 % SOC.
- ⇒ Hyperion Long Life has 60 % SOC – set Lower battery discharge limit to 30 % and confirm with Save all.

5. The battery system adjusts to the parameterized SOC and holds it.
6. Install the new battery module. See chapter 3.3.4 from step 3.

Table 7: OCV at SOC  
Helios Long Life battery  
module and Hyperion  
Long Life system

Voltage		System voltage with number of battery modules in series	
Module	SOC	4	6
48.2 V	0 %	192.6 V	289.0 V
49.3 V	10 %	197.2 V	295.7 V
49.8 V	20 %	199.3 V	299.0 V
50.4 V	30 %	201.6 V	302.4 V
51.1 V	40 %	204.4 V	306.6 V
51.8 V	50 %	207.0 V	310.5 V
52.5 V	60 %	210.0 V	315.0 V
53.2 V	70 %	213.0 V	319.5 V
53.9 V	80 %	215.6 V	323.4 V
54.6 V	90 %	218.6 V	327.8 V
56.0 V	100 %	223.8 V	335.7 V

NOTE: All voltage specifications refer to the open circuit voltage (OCV).

## 9 Further directories

### 9.1 Glossary

Term	Definition
AWG	American Wire Gauge - American standard for wire cross section
BMS	battery management system
CHP	combined heat and power
damage	physical injury or damage to the health of persons. or damage to property or the environment
hazard	potential source of damage
OCV	open current voltage: voltage without load on the battery
PPE	personal protective equipment
qualified personnel	an individual who, based on his or her relevant professional education, training and/or experience, is capable of identifying risks and preventing hazards arising from the use of the product
thermal runaway	chemical process that is triggered by heat and generates additional heat.
user	individual who uses the product

### 9.2 List of tables

Table 1: Warnings .....	6
Table 2: Explanation of the symbols used.....	6
Table 3: Technical data .....	11
Table 4: Overview LED status codes .....	13
Table 5: Pin assignment of X2 for SMA SB Storage, Sungrow SH RT and GoodWe ET PLUS+ .....	31
Table 6: Pin assignment of X2 for SOFARSOLAR HYD Serie, Solis and Kostal PLENTICORE plus/BI .....	32
Table 7: OCV at SOC Helios Long Life battery module and Hyperion Long Life system .....	33

### 9.3 List of figures

Figure 1: Overall view of battery system.....	10
Figure 2: Installation kit .....	11
Figure 3: Insert 3 to 6 Helios Long Life modular batteries.....	16
Figure 4: Modular batteries fixed to the grounding support .....	17
Figure 5: Connecting the modules to the BMS master with patch cables.....	17
Figure 6: Power path with switching devices and BMS.....	18

---

Figure 7: Connecting the SMA SB Storage to the BMZ Hyperion Long Life.....	20
Figure 8: Connection of SMA STP SE to BMZ Hyperion Long Life.....	21
Figure 9: Connecting the PLENTICORE plus/BI to the BMZ Hyperion Long Life.....	23
Figure 10: Connection of GoodWe ET PLUS+ to BMZ Hyperion Long Life.....	25
Figure 11: Connection of SOFARSOLAR HYD 5...20KTL to BMZ Hyperion Long Life.....	26
Figure 12: Connection of Solis .....	27

# Any questions?

Contact us, we will be pleased to advise you.

BMZ Germany GmbH

Zeche Gustav 1  
63791 Karlstein am Main  
Germany

T: +49 6188-9956-0

E: [mail@bmz-group.com](mailto:mail@bmz-group.com)

[www.bmz-group.com](http://www.bmz-group.com)

All rights reserved. All information contained herein may be changed at any time.

